



Miracle Mold Material

Sku # MK-07


Instructions:



1. Take equal parts of the miracle mold material (again start with something small and only use a small portion of the material). One the mold materials is an ivory color and the other is a yellow color. Each of these you will mix together thoroughly by hand. You will know they are mixed together thoroughly when the material is a consistent yellow with no streaks. You will have to work fast because the material does start to set up in about 5 minutes.



2. The next step is to take the material and form it completely around the item you want to create the mold from. Make sure you apply pressure throughout the object and have some level of thickness of the material around the object. Depending on the objects shape leave the bottom of the mold material open so that when you are ready to pour your wax or soap material into your mold the bottom will be open to allow you to pour and then also remove you're the finished mold. The thicker the molding material. the more durable your mold will be for future usage.

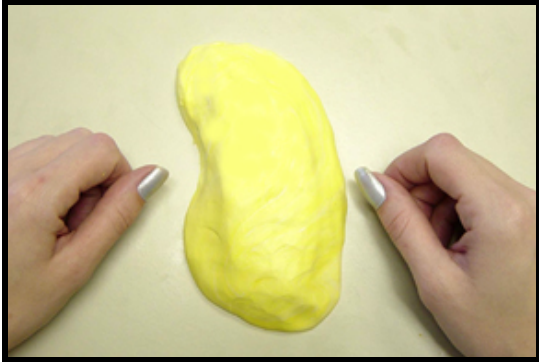

3. Once you have the material uniformly covered (leaving the bottom open) take the bottom of the mold (which will actually be the top of the mold) and gently flatten out so the mold will rest flat.
4. Let the product set up for at least 30-40 minutes and then remove your object from the mold material. You now have your finished mold and you can start using it for soaps, candles or candy creations.

FEATURES

- Make all of your own custom molds for Candles and Soaps. Great for Weddings, baby showers and other special events.
- Make your own embeds
- Easy to mix by hand
- No waste of materials only mold to the level of the desired thickness of the mold
- Very fast set up time no need to wait over night to use
- Can be used with wax, soap, and candy chocolates.

For inquiries on larger bulk quantities of this material please contact us at the number listed below.



**3765 Old Easton Road - Doylestown, PA 18902
Ph: 215-230-3601 Fax: 215-230-3606**